


Summary Tab Overview

The Summary Tab configuration was created to allow Zedi Access users easy access to a locations data that matter most to them within a grid view. Once the Summary Tab has been selected, a user is able to see the sites in an order that makes sense to them and they are able to easily see all their locations, on one screen without having to move to a new Well Site Display (Locations tab) or scroll up and down. The Summary Tab will also highlight any locations that have a current alarm, no communication and if any alarm parameters have been enabled by a per sensor basis.

SUMMARY TAB

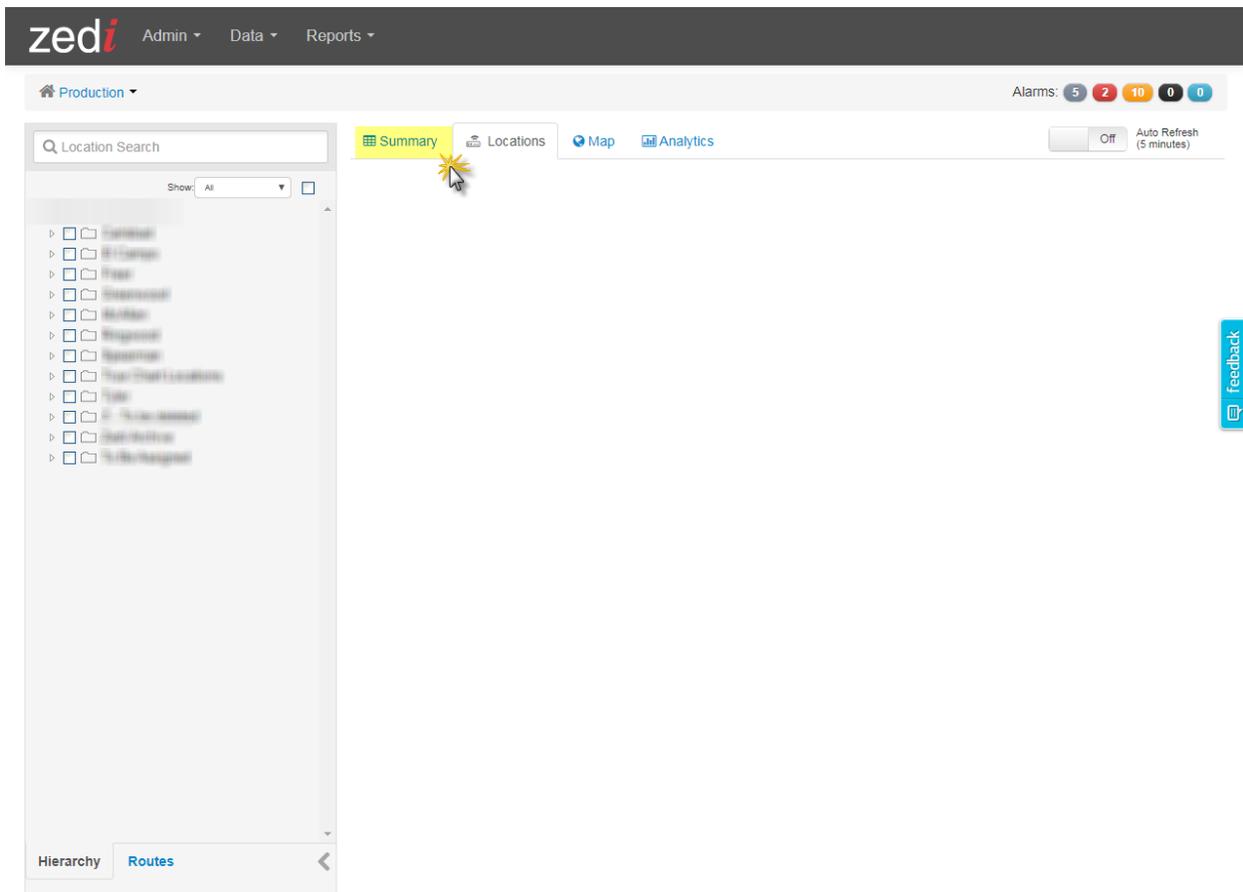

Summary Locations Map Analytics Off Auto Refresh (5 minutes) Refresh

Wells

Location	Last Transmitted	Gas Flow Rate (M...	Static Pressure (psi)	Differential Press.
HACKBERRY HILLS	2019-03-13 12:28:20 (CDT)	0	230.05	0
Shoe Bar Ranch U-3 #1	2020-03-06 14:20:39 (CST)	0	17.94	0
Federal #6-1	2020-03-06 14:20:39 (CST)	0	28.96	-0

feedback

a. The **i** icon is additional location details.

Location	Last Transmitted
HACKBERRY HILLS	2019-03-13 12:28:20 (CDT)

UWI: 8960
 Device Type: Zedi SCADA (Offline)
 Serial Number: VER006FB107HACKBERRYHILLS
 IP Address: 10.104.9.23

b. The **☰** icon is the same as the options menu on the Well Site Display(Locations tab). From this icon, you can access Live Data and see custom reports and graphs.

Summary Locations Map Analytics

Test Category Wells

Location	Last Transmitted
HACKBERRY HILLS	2019-03-13 12:28:20 (CDT)
Federal (Devon)	2020-01-09 09:15:18 (CST)
Ranch U-3 #1	2020-01-25 17:20:53 (CST)

- Configure Alarm
- Configure Location
- Data Entry
- Event Log
- Live Data
- Location Properties
- Meter Reports
- QTRs
- Edit Location


Alarms

Summary Locations Map Analytics Off Auto Refresh (5 minutes) Refresh

Wells

	Location	Last Transmitted	Gas Flow Rate (M...	Static Pressure (psi)	Differential Press...
☰ ⓘ	Bennett 23-B-1	2020-03-09 16:26:04 (CDT)	0	-0.11	-0.0
☰ ⓘ	F...	2019-11-06 11:26:11 (CST)	0	2.02	-0.
☰ ⓘ	...	2020-03-09 16:26:03 (CDT)	0	99.11	-0.0
☰ ⓘ	...	2020-03-09 16:27:18 (CDT)	0	238.94	-0.0
☰ ⓘ	...	2020-03-09 16:26:03 (CDT)	0	888.86	-0.2

- c. Color shaded cells represent **Alarms**
 Grey background on location field —No Comms Alarm

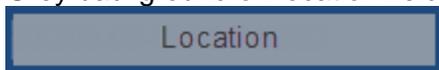

- Orange/Yellow cells —High/Low alarms



- Red cells —High High and Low Low alarms, or Smart-Alek cry out alarms



Data


Summary Locations Map Analytics Off Auto Refresh (5 minutes) Refresh

Wells


	Location	Last Transmitted	Gas Flow Rate (M...	Static Pressure (psi)	Differential Press...
☰ ⓘ	Bennett 23-B-1	2020-03-09 16:26:04 (CDT)	0	-0.11	-0.0
☰ ⓘ	F...	2019-11-06 11:26:11 (CST)	0	2.02	-0.
☰ ⓘ	...	2020-03-09 16:26:03 (CDT)	0	99.11	-0.0
☰ ⓘ	...	2020-03-09 16:27:18 (CDT)	0	238.94	-0.0
☰ ⓘ	...	2020-03-09 16:26:03 (CDT)	0	888.86	-0.2

- d. Black Font: Live Data **520.28**
 Green Font: Alarm set points have been “enabled” for this sensor **145.56**
 Grey Font: Stale Data, has not transmitted in the last 24 hours **89.2**

1. For users have access to the Summary Configuration they need to have 2 Web Permissions assigned. In the Admin drop down menu, under users, and in web permissions, select **Summary Configuration – Edit and Summary Configuration – View**. Users who do not have this selected will not be able to see the Summary Configuration tab under the Admin Menu.

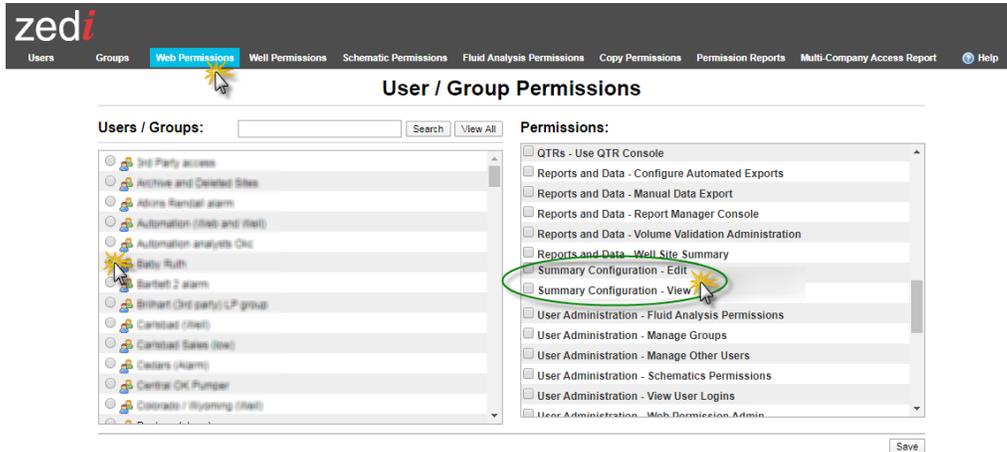

2. Once the user with both permissions logs in they can see the Summary Configuration in the Admin dropdown.

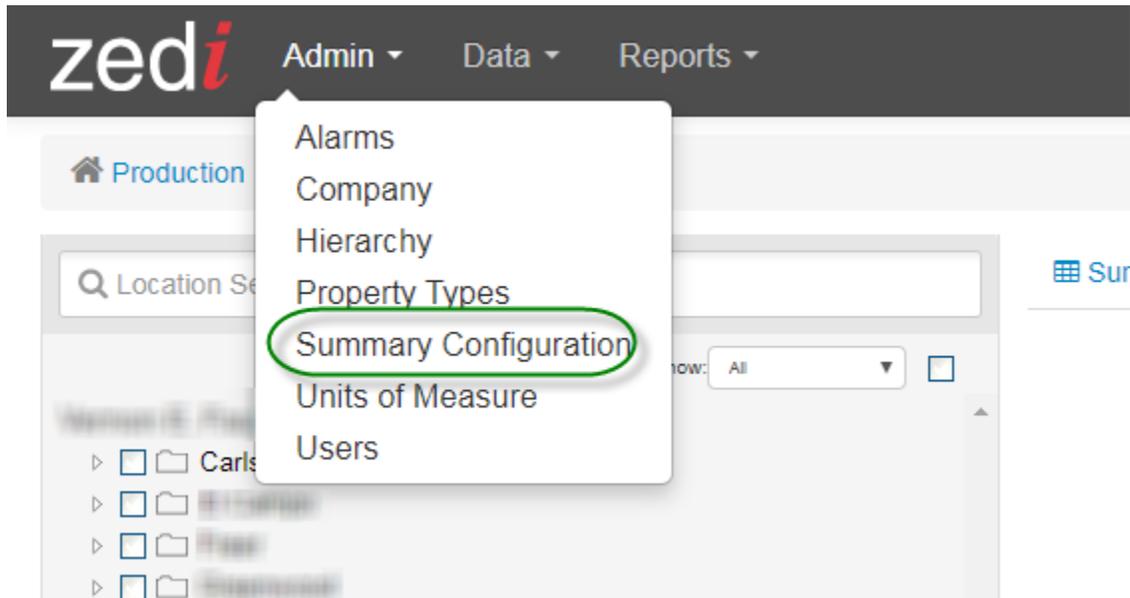


3. The user is now able to do the following:
 - a. User can see the list of all existing location categories in the company (both company specific and system)
 - b. User can only View a system location category. They cannot edit or delete it.
 - c. User can Add, Edit or Delete a company specific location category.
 - d. User can bulk assign or unassign locations from any location category (except Not Assigned – this one is for automatically catching any locations that are not assigned to any location categories yet).
 - e. User can also see the list of locations assigned to a location category by clicking on the number link under Locations Assigned column.



Type	Location Category Name	Configure	Locations Assigned
\$	Not Assigned		0 Locations
\$	SilverJacks		0 Locations
\$	Wells		3074 Locations

4. When the user clicks on the Bulk Assign/Unassign button, a Bulk Assign/Unassign page opens. This is where user needs to select a Run/Route and click on the Assign or Unassign button depending on what they are intending to do.

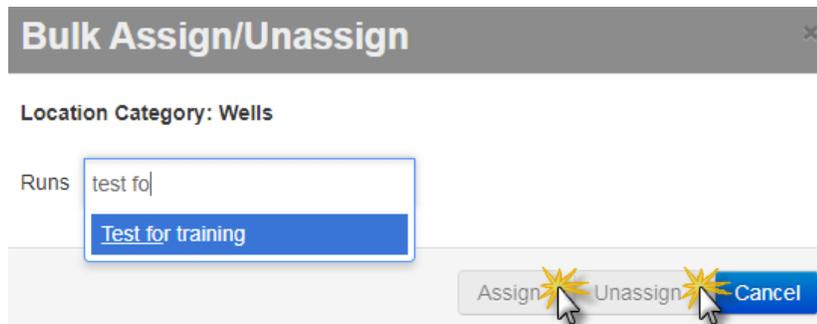


Bulk Assign/Unassign

Location Category: Wells

Runs:


Test for training

5. To add a **Location Category**, select **Add**.

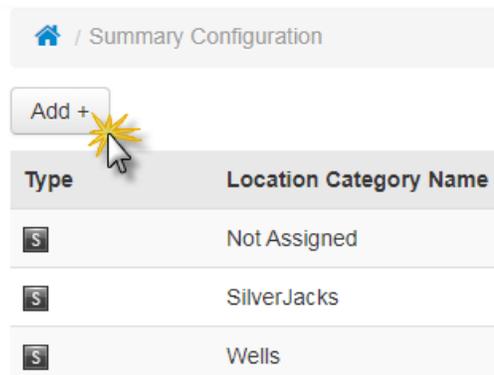


Type	Location Category Name
\$	Not Assigned
\$	SilverJacks
\$	Wells

6. In the Add Location Category screen
 - a. Enter in a new **Location Category Name**.
 - b. Select the **Sensors** that you would like to see for this Category on the left of the screen. The sensors that you have selected will appear on the right.
 - c. Select **Save**.

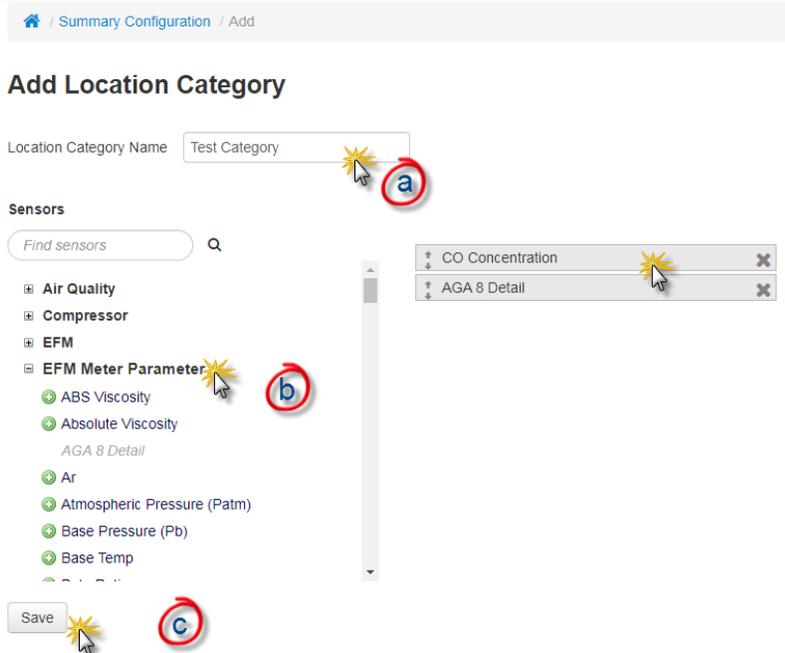

7. Once the locations have been assigned to a location category, those locations are selected in tree (either through Hierarchy tab or Run/Routes tab), locations will show up under the location categories that they are part of (under Summary tab)

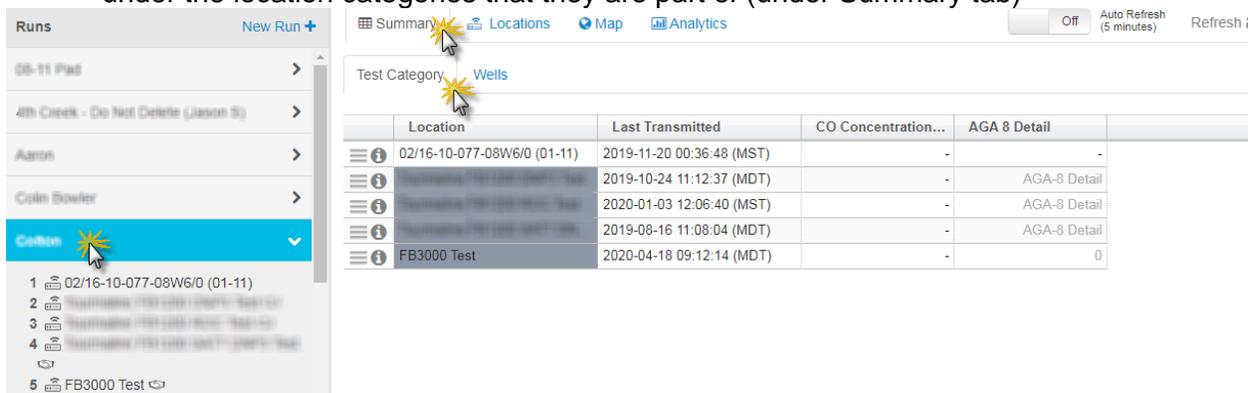

8. Once the locations have been assigned to a location category, those locations are selected in hierarchy (either through Hierarchy tab or Run/Routes tab), locations will show up under the Location Categories that they are a member of (under Summary tab).

Should you have any questions regarding this latest update, please feel free to contact our Customer Care team 1-866-732-6967 or zedi.support@emerson.com